

KidGuard - WOCD Safety Information

IMPORTANT SAFETY INFORMATION

THIS SAFETY INFORMATION SHOULD BE LEFT WITH THE WOCD FOR THE OCCUPANT

WARNING

POSSIBLE FALL HAZARD

- This window opening control device(s) (WOCD(s)) is designed to protect against accidental operation of windows by children five years and younger.
- This window opening control device(s) (WOCD(s)) is not a substitute for attentive supervision of all young children.
- Keep window opening control device(s) (WOCD(s)) properly engaged unless needed for use in an emergency.
- The WOCD should be maintained and tested once per month and closed securely after testing.
- Young children may fall out of the window if the opening control device (WOCD) is not installed correctly.
- All household members 6 years and older should know how to operate the release the mechanism in case of emergency.
- Install the device so that a 4" diameter sphere may not pass through the window after the WOCD has been installed.
- Use recommended materials and techniques when installing and using this product.
- Make sure the that the WOCD is securely installed in accordance with instructions provided.
- Make sure the window frame is in good condition.

WARNING

No Window Rescue Above 75 ft (6th Floor).

- Fire rescue ladder may not reach beyond 75ft (6th Floor).
- Do not rely on being rescued from windows above 75 ft (6th Floor). Follow building fire escape plan.

WARNING

Blocks Escape in Fire and Emergency Unless Released

OPERATION OF WINDOW OPENING CONTROL DEVICE

- Step 1: Move the window so the pin stops above the bump on the bottom arm.
- Step 2: Pull down the red slide collar to drop the latch (pull latch down if it doesn't drop).
- Step 3: Push the round pin out of the bottom arm and while holding the pin clear, open the window.
- Step 4: Re-engage the WOCD by closing the window.

KidGuard Operating Instructions


Casement Window Opening Control Device (WOCD)

Leave in default restricted position

Your window should be left in the restricted position that prohibits the window from opening more than 4" to keep children 5 years and younger from opening the window. Open your window for cleaning and emergency escape, and re-engage by following the 4 steps below.

1. Slide red sleeve down to drop latch

Red sleeve slides down towards the inside of the building as indicated by the red arrow.

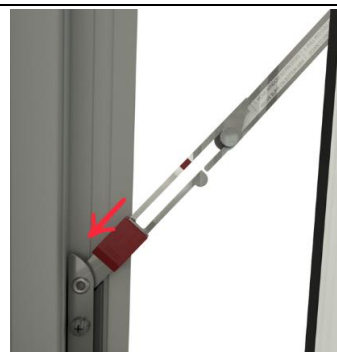

2. Crank window closed to align pin with red line



3. Push pin out of slot while opening window

With one finger push the pin out of slot. With other hand crank the window open until pin is clear of lower arm.

Alternatively you can rotate the top arm down until pin is clear of the slot and then crank the window open.



4. Re-engage the WOCD by closing the window

